

# STALLWORKS

---

## PREMIER SLIDER INSTALLATION INSTRUCTIONS

For questions and comments please don't  
hesitate to contact us!

Email- [Sales@stallworksllc.com](mailto:Sales@stallworksllc.com)

Phone- 434.933.8939

9056 Oakville Rd.  
Gladstone, Va 24553

\*BEFORE YOU BEGIN. Please be aware that every barn and every situation is unique. Some mild alterations might be required from the instructions in order to make it go smoothly for your barn.



**FOLLOW US FOR MORE CONTENT!**





2x10



6x6 Post

STEP 1 : Mount the track to the building, ensure that the track is level

2x4


Corrugated Metal Siding

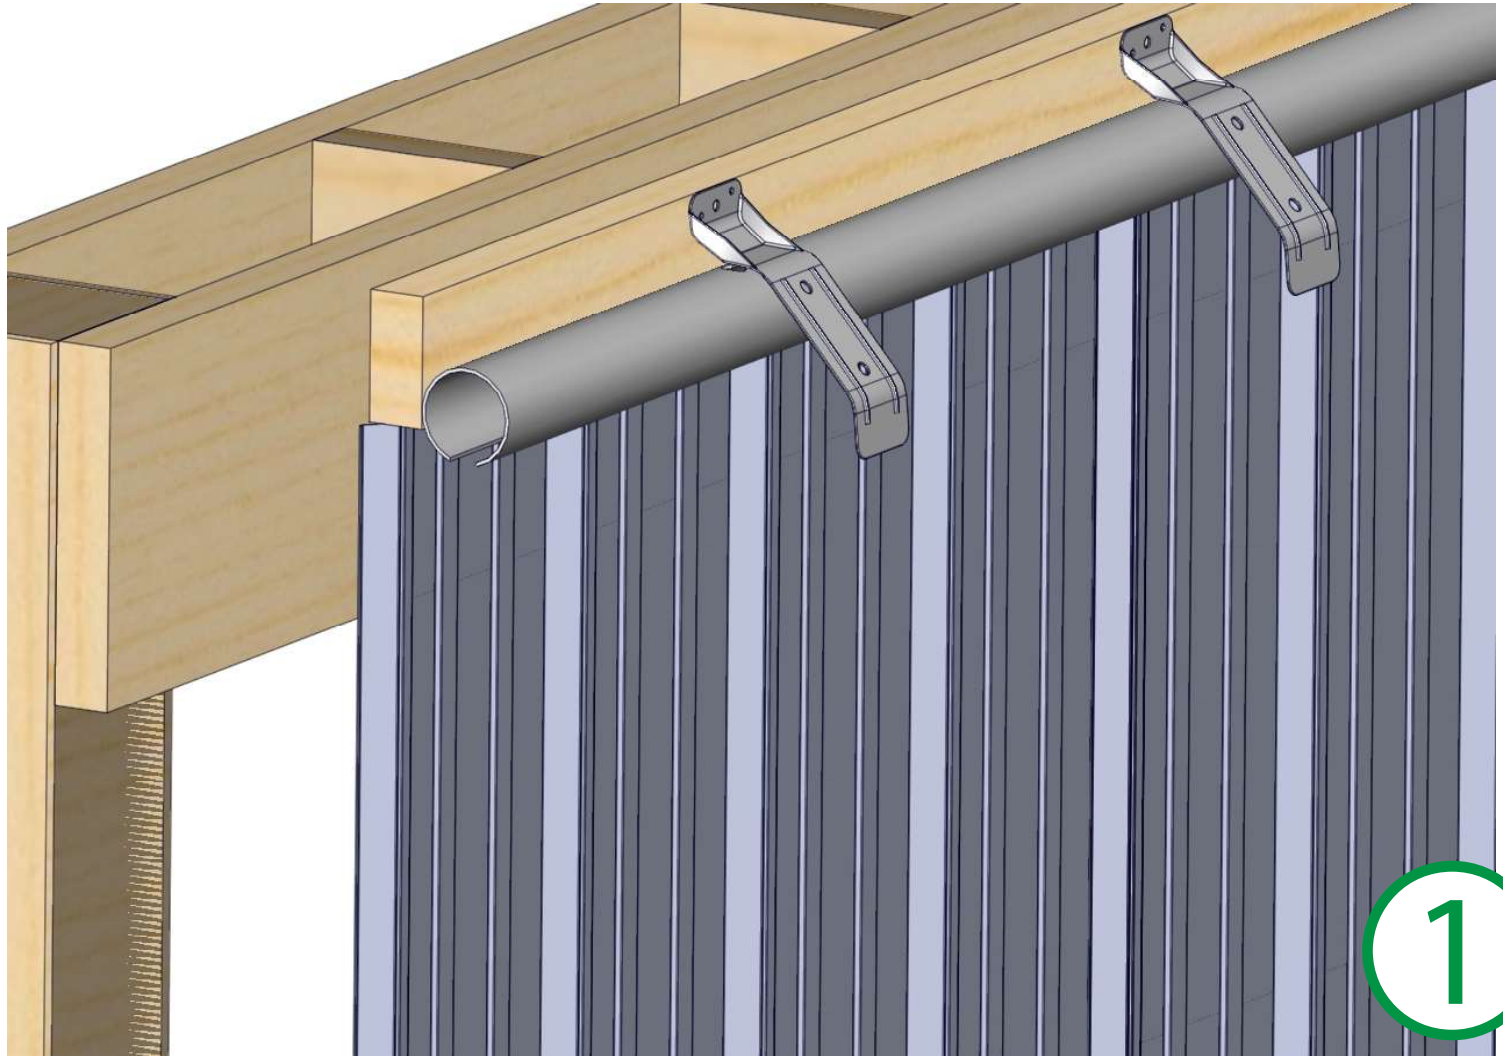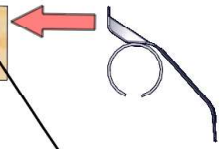

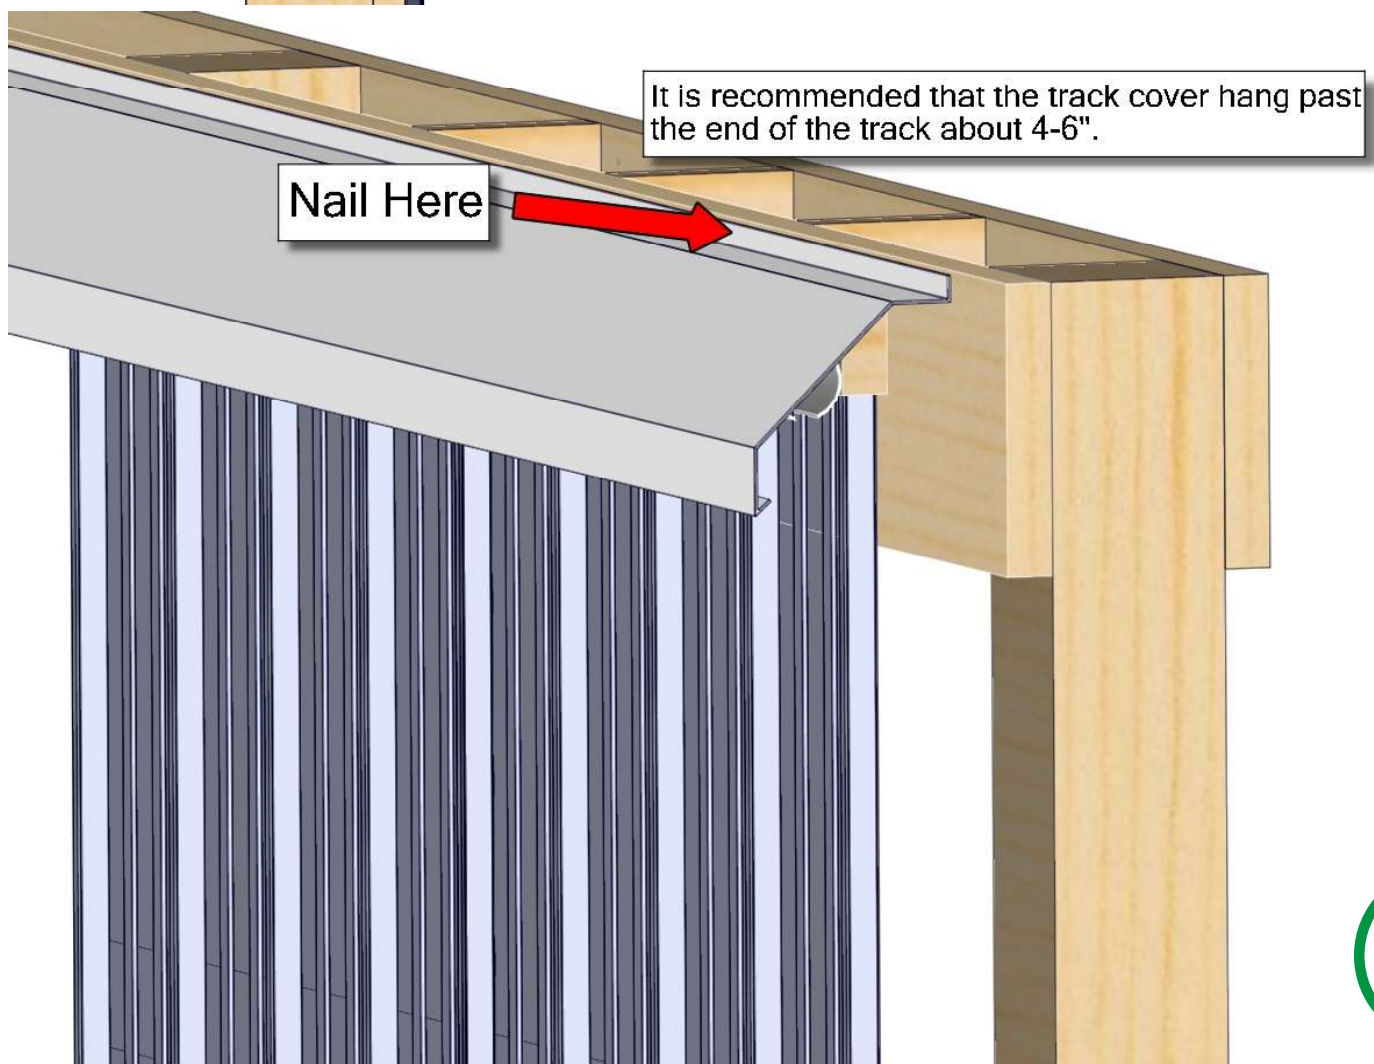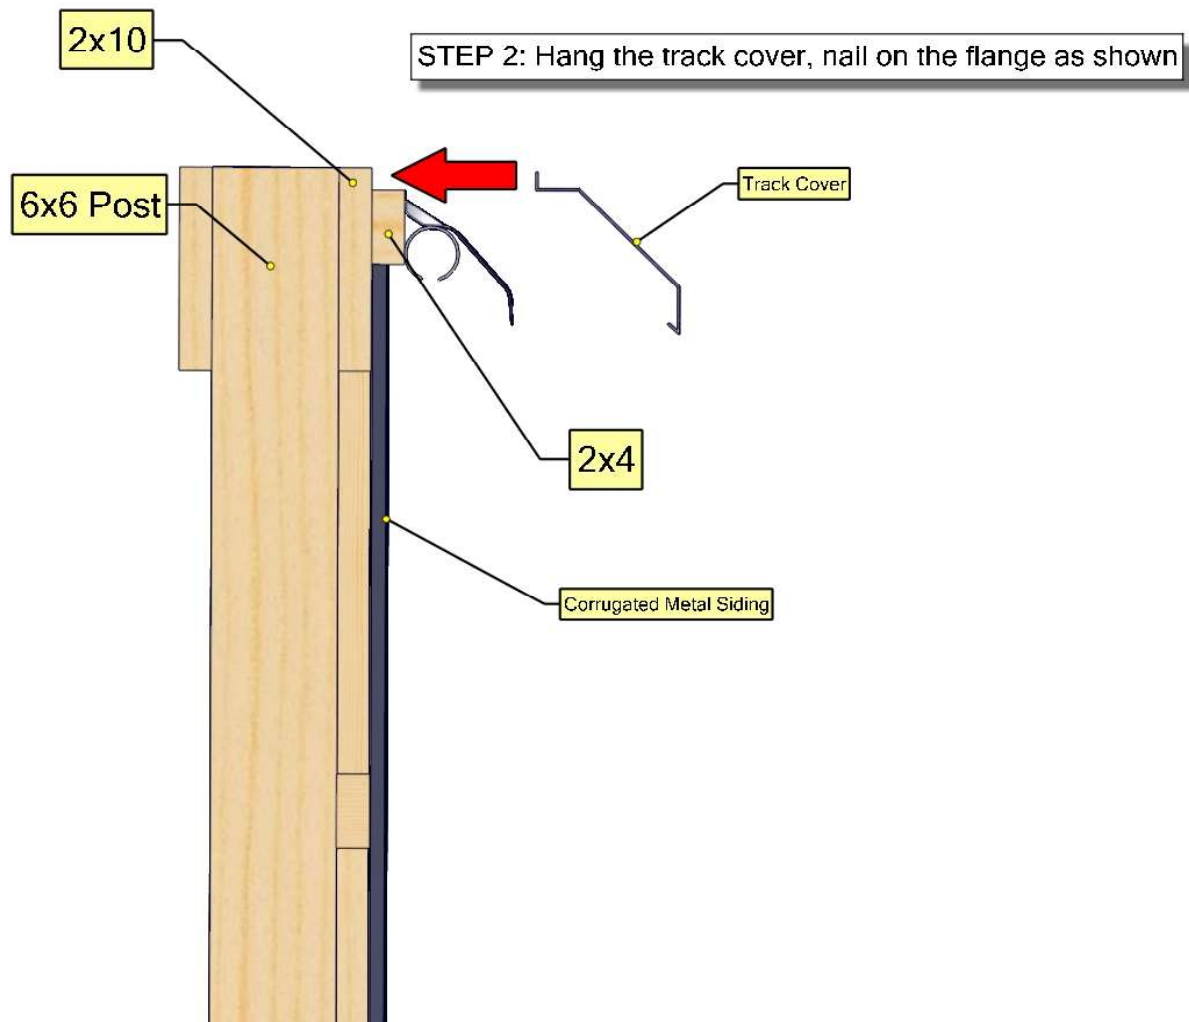





STEP 3: Hang the first panel.

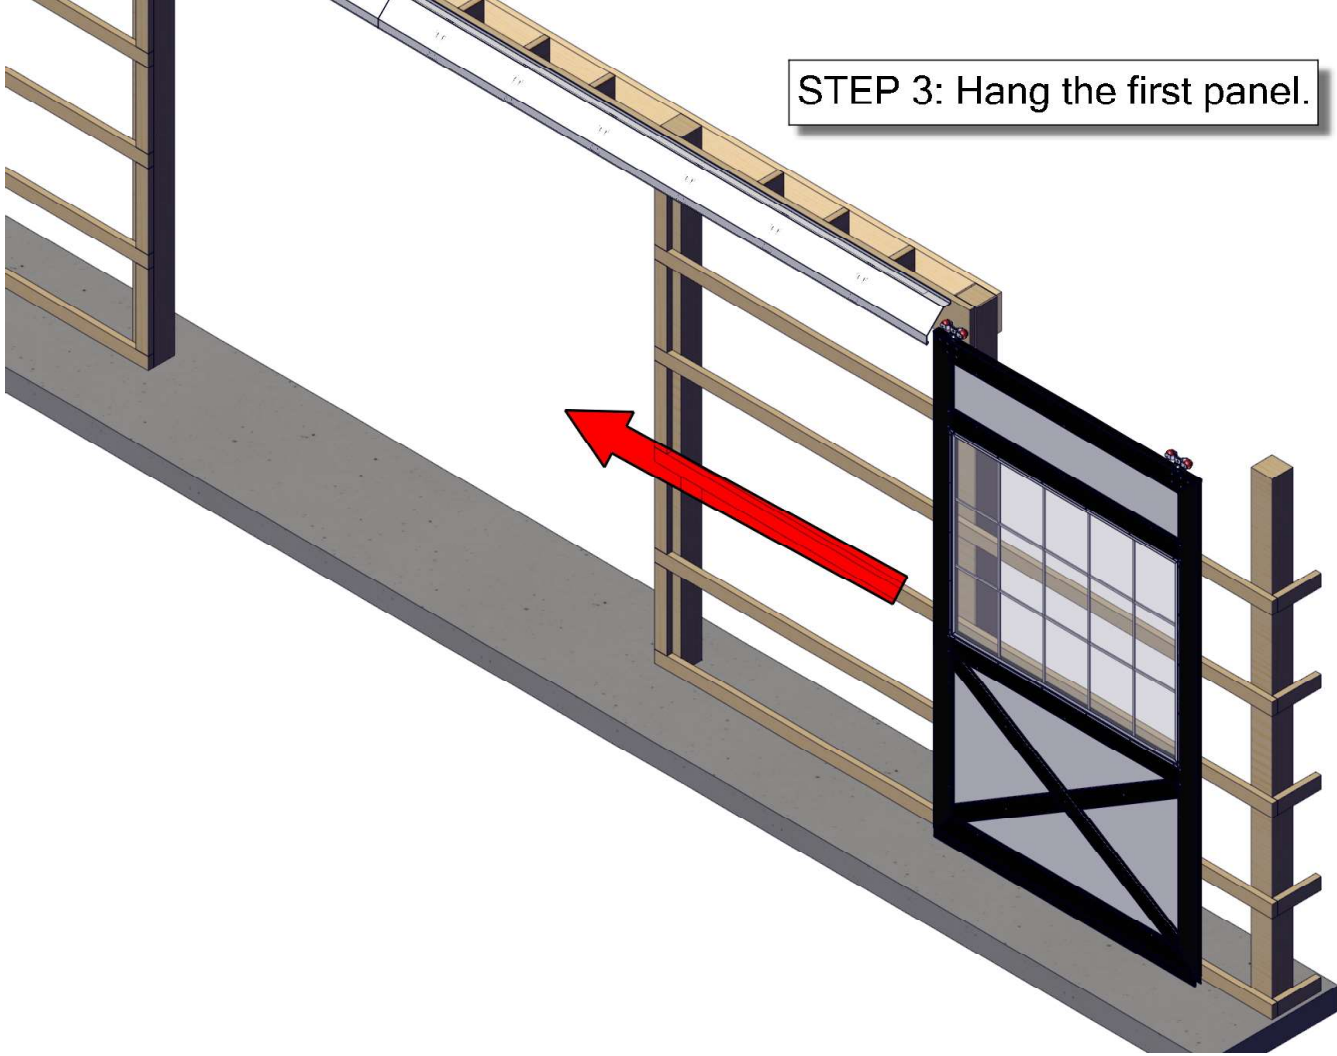


STEP 4: Slide splice collar into the track before hanging the second panel.  
\*Track cover not shown for clarification.

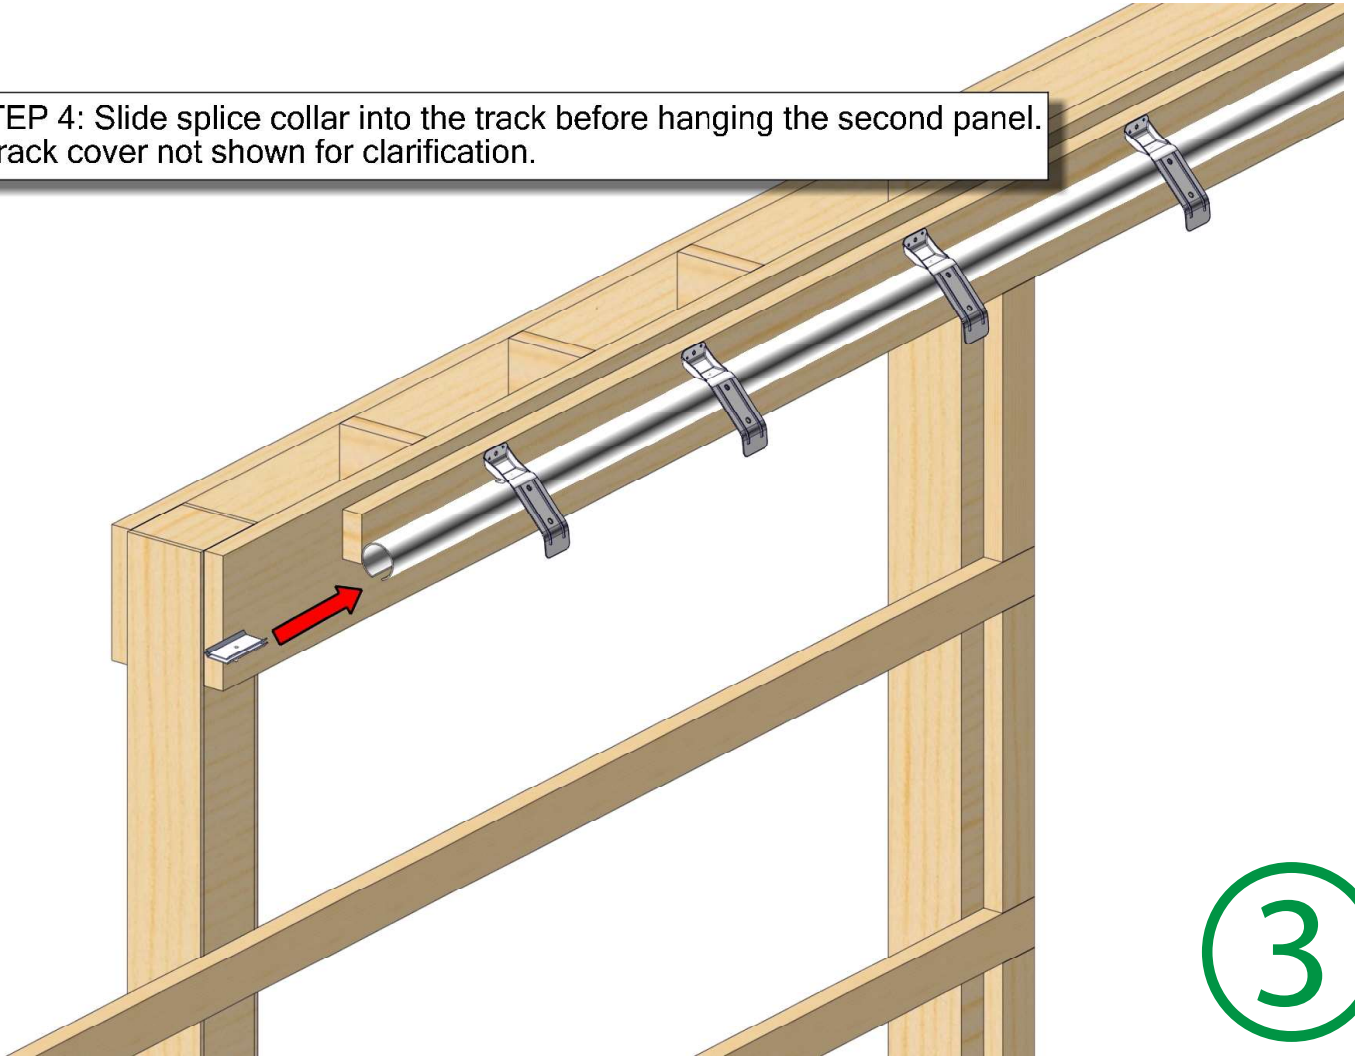


STEP 5: Hang the second door panel. Adjust the trolleys to the desired height to obtain a level and smooth appearance.

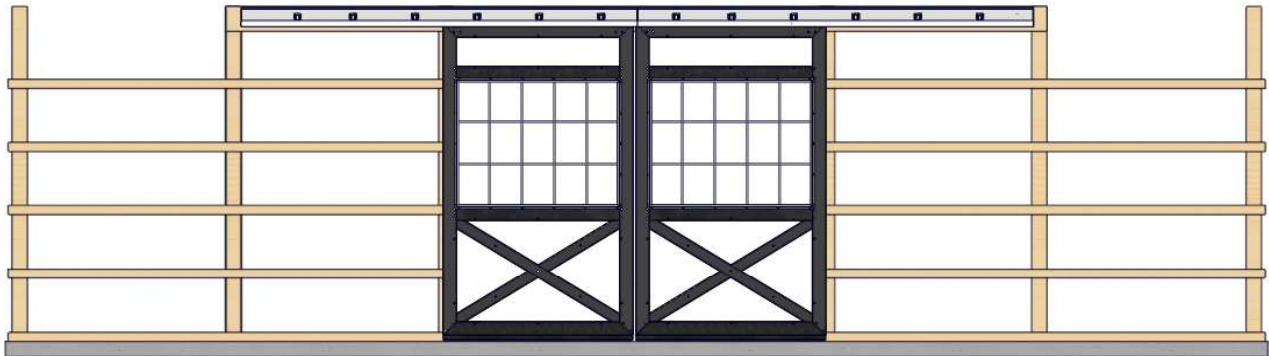

STEP 6: Install 5/16x4 wood lags on each end of the track as a safety stop, to prevent the doors from sliding off the end. For a finished look, install end caps.

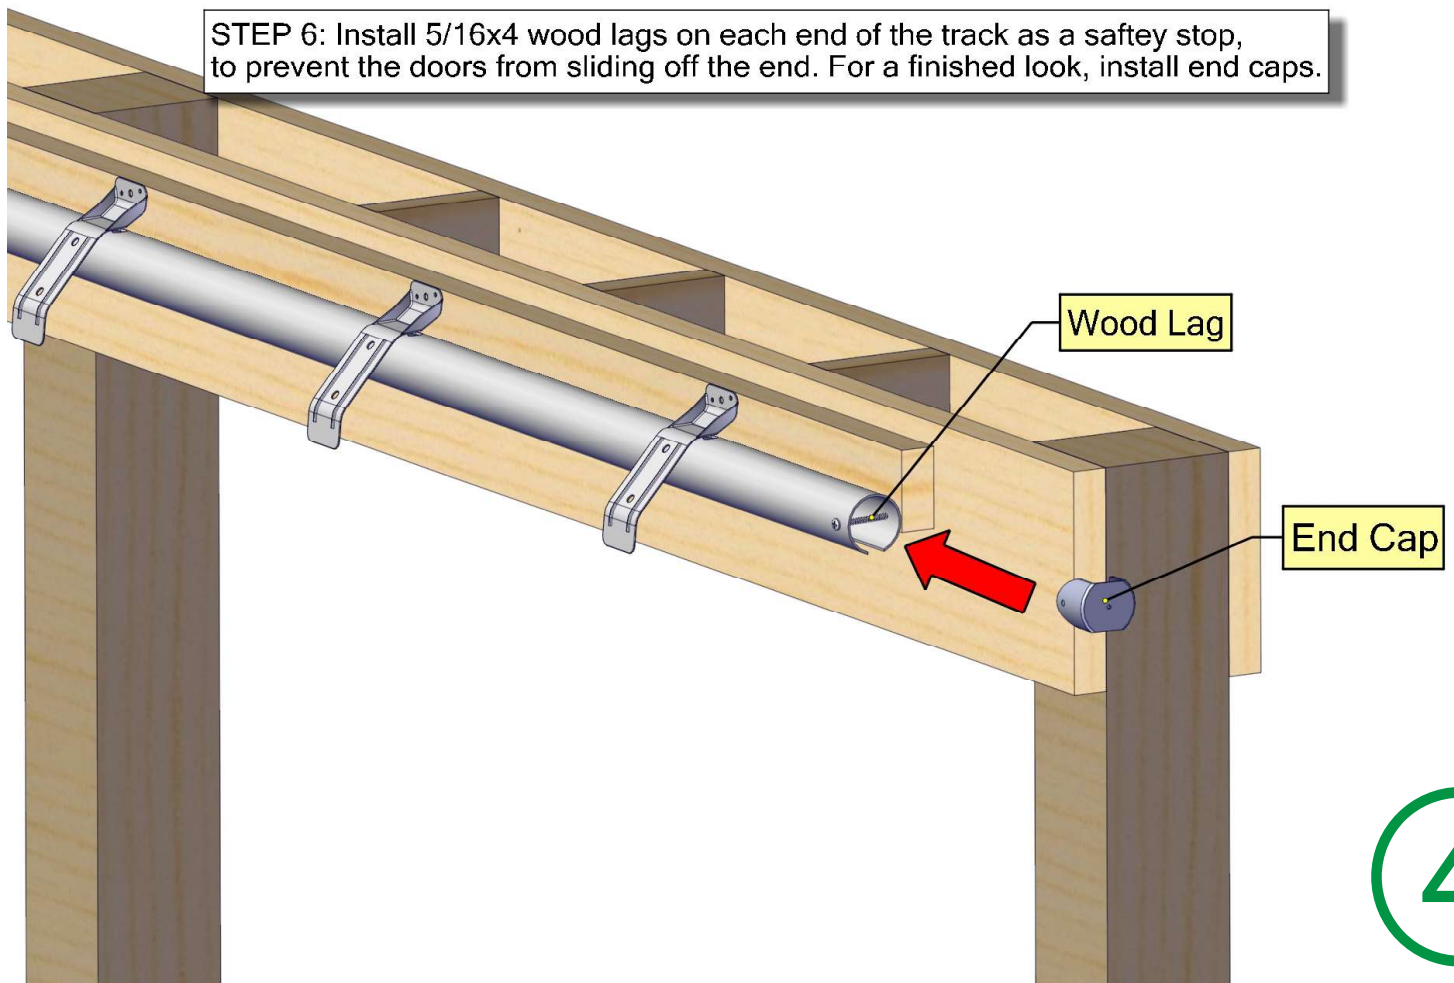

STEP 7: Handle installation must be done before adjustable door stops or stay blocks are installed.

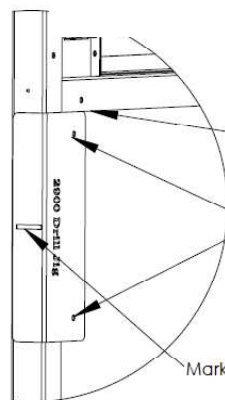

7A

Use metal Drill Jig provided.

Make Drill Jig even  
with this edge


Start with the back of door.  
Holding **Drill Jig** in corner as shown,  
drill top and bottom holes with a  
1/4" bit.  
Drilling through **plywood core only.**

Mark a line using a pencil in slot. This will be  
used to line up Drill Jig for  
front holes.

7B

Align slot in **Drill Jig**  
with pencil line made in step 1.


Holding Drill Jig in place,  
drill through front of door and  
holes drilled from back.

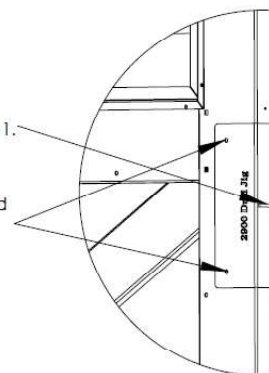

7C


Slide **Countersunk washers** onto bolts

Once **Countersunk washers** are on  
bolts. Push bolts through  
until they can be seen out of  
the front. Align **Front Handle**  
with those bolts. Tighten bolts until  
the handle does not move.

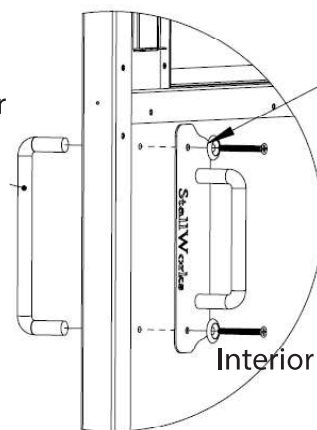

Exterior  
Handle

Interior Handle

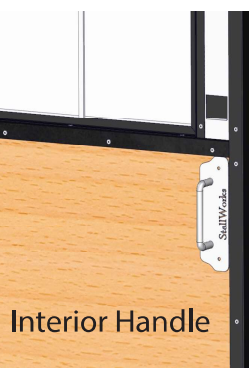


Interior Handle



Exterior  
Handle


STEP 8: Using the pre-drilled holes in the door panel, attach the C-Channel to one door using self-tapping screws provided (yellow bag). Pair 2 of the rubber bumpers using the self-tapping screws at the top and bottom of the C-Channel as shown. This provides a quiet close.

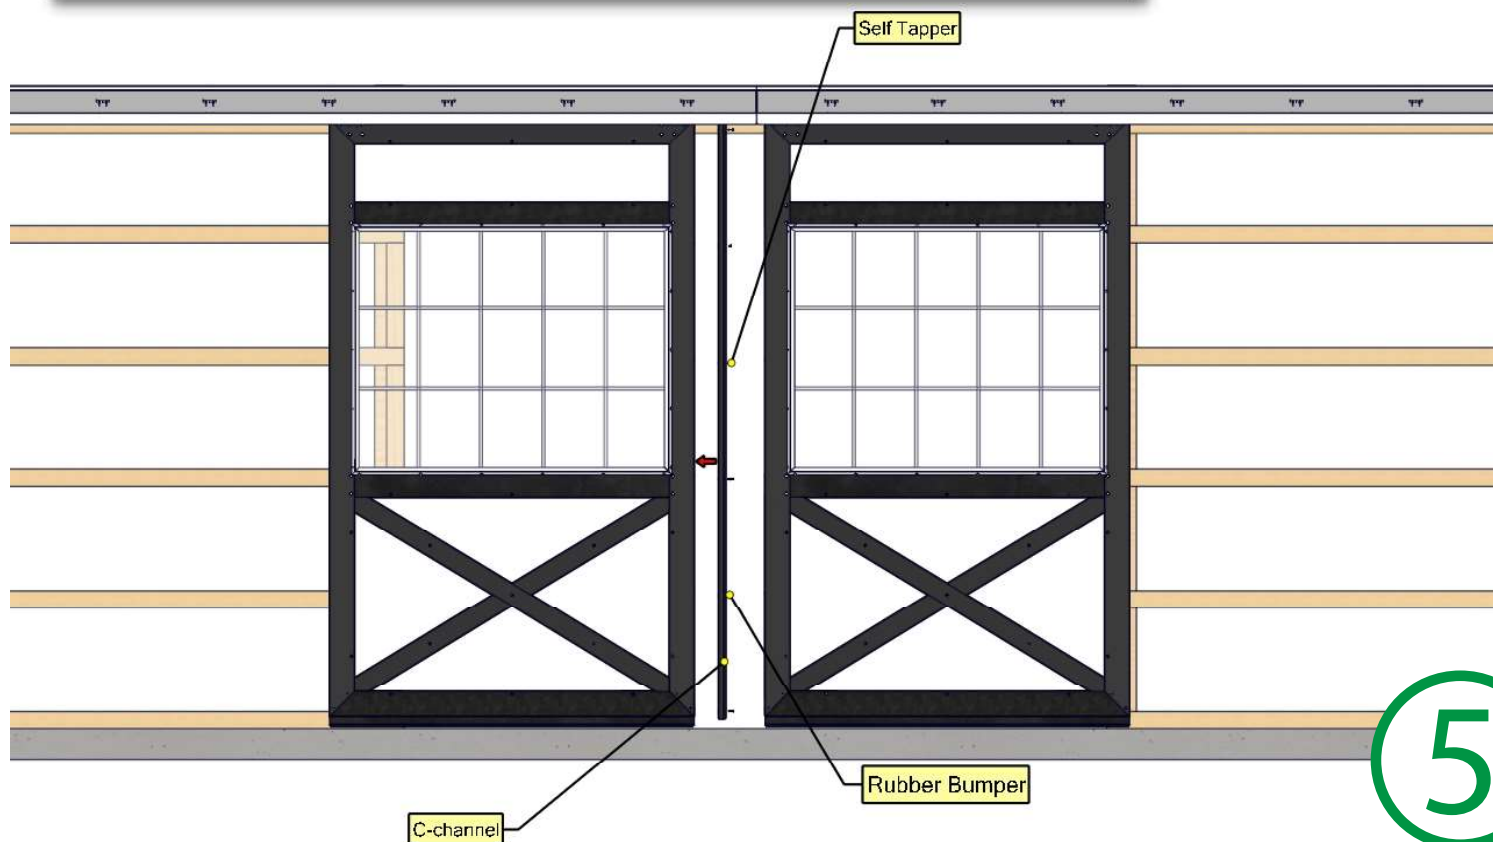


5




**STEP 9:** Attach the stay block to the building on each side of the door using the hardware provided (blue bag). As shown below, place the stay block below the door guides to allow the block to move freely through the guide.

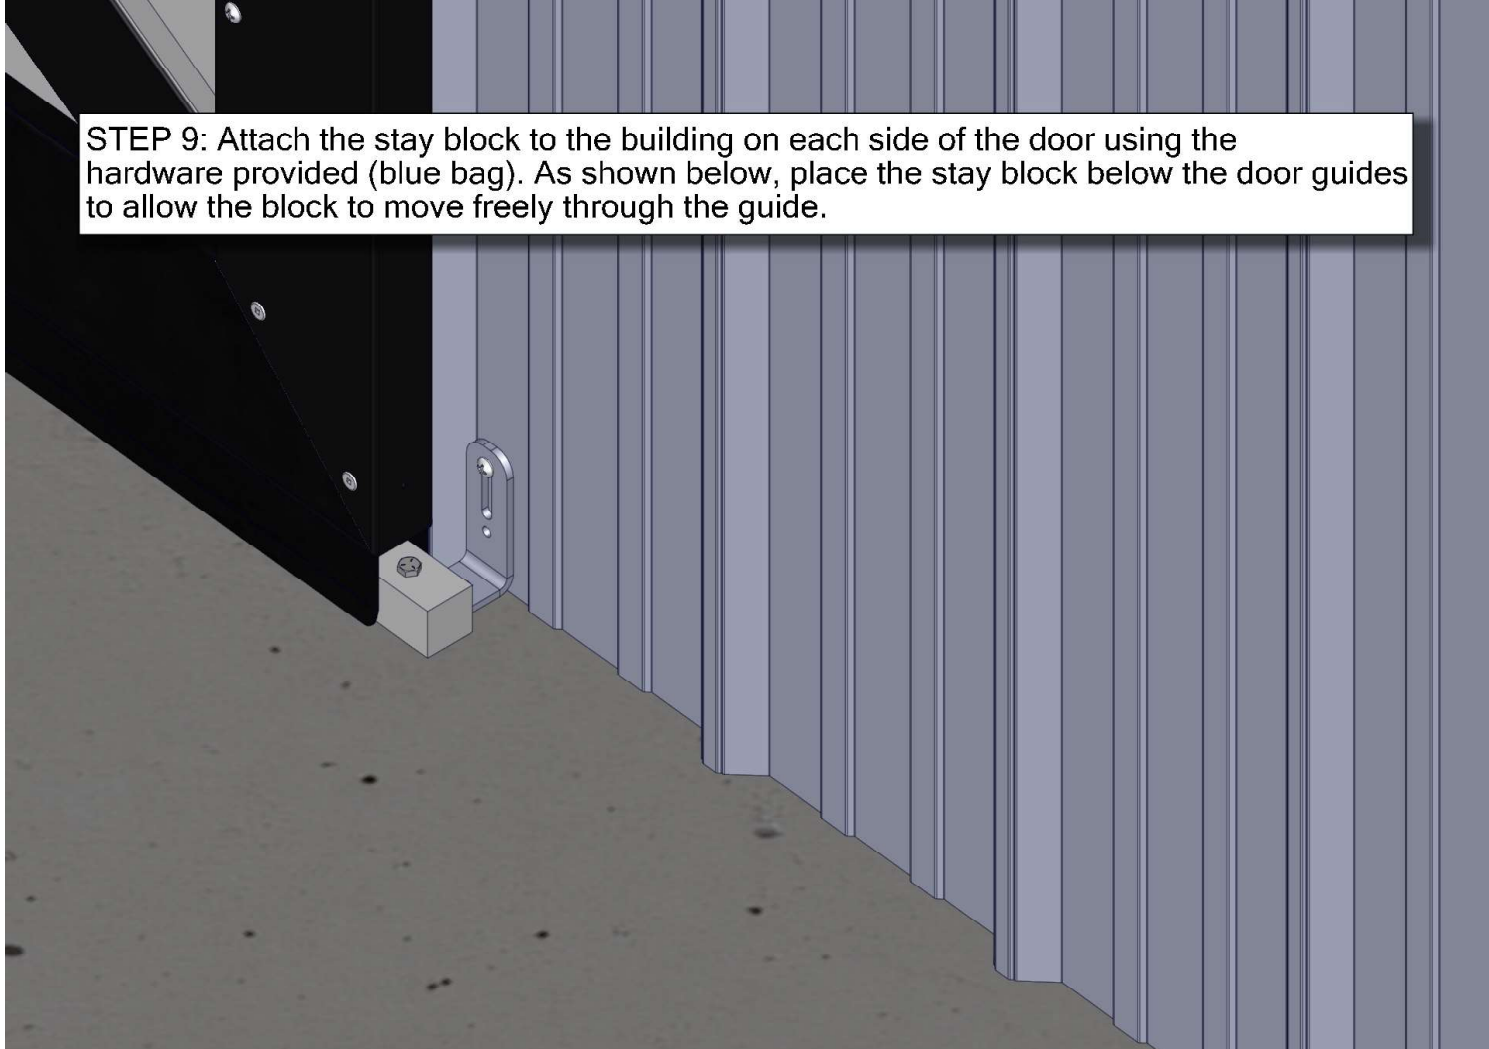


**STEP 10: Adjustable Door Stop- Option A.**  
Attach the adjustable door stop to the building at each end of the doors (in the fully opened position) with the hardware provided (green bag). There 2 options to work around metal ribs (see step 9). At this point, remember to center and tighten the splice collar in step 4.

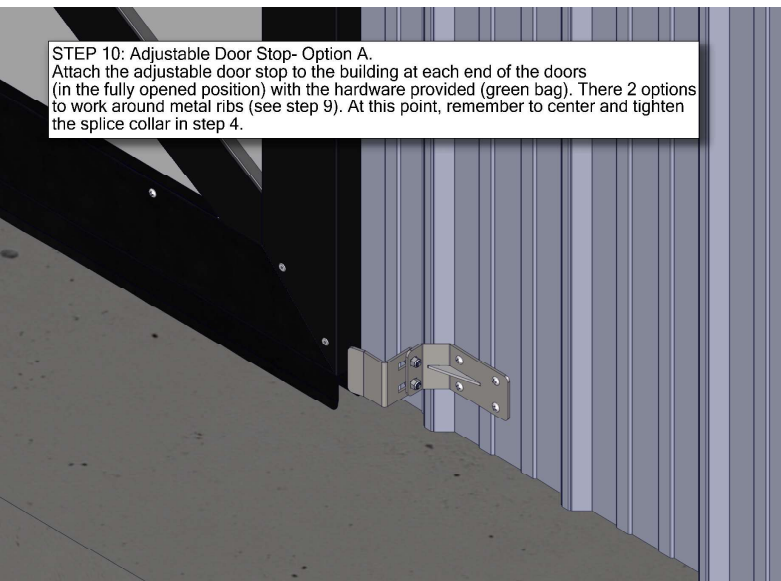

**STEP 11: Adjustable Door Stop- Option B.**  
See below for the second option for installing the adjustable door stop.

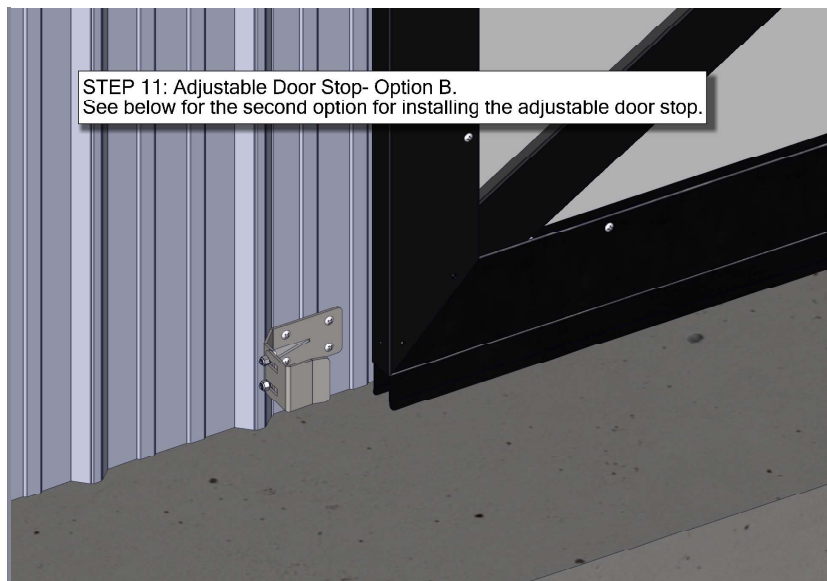

**STEP 12: Attach the cane bolt to the core. The cane bolt can go on either panel.**

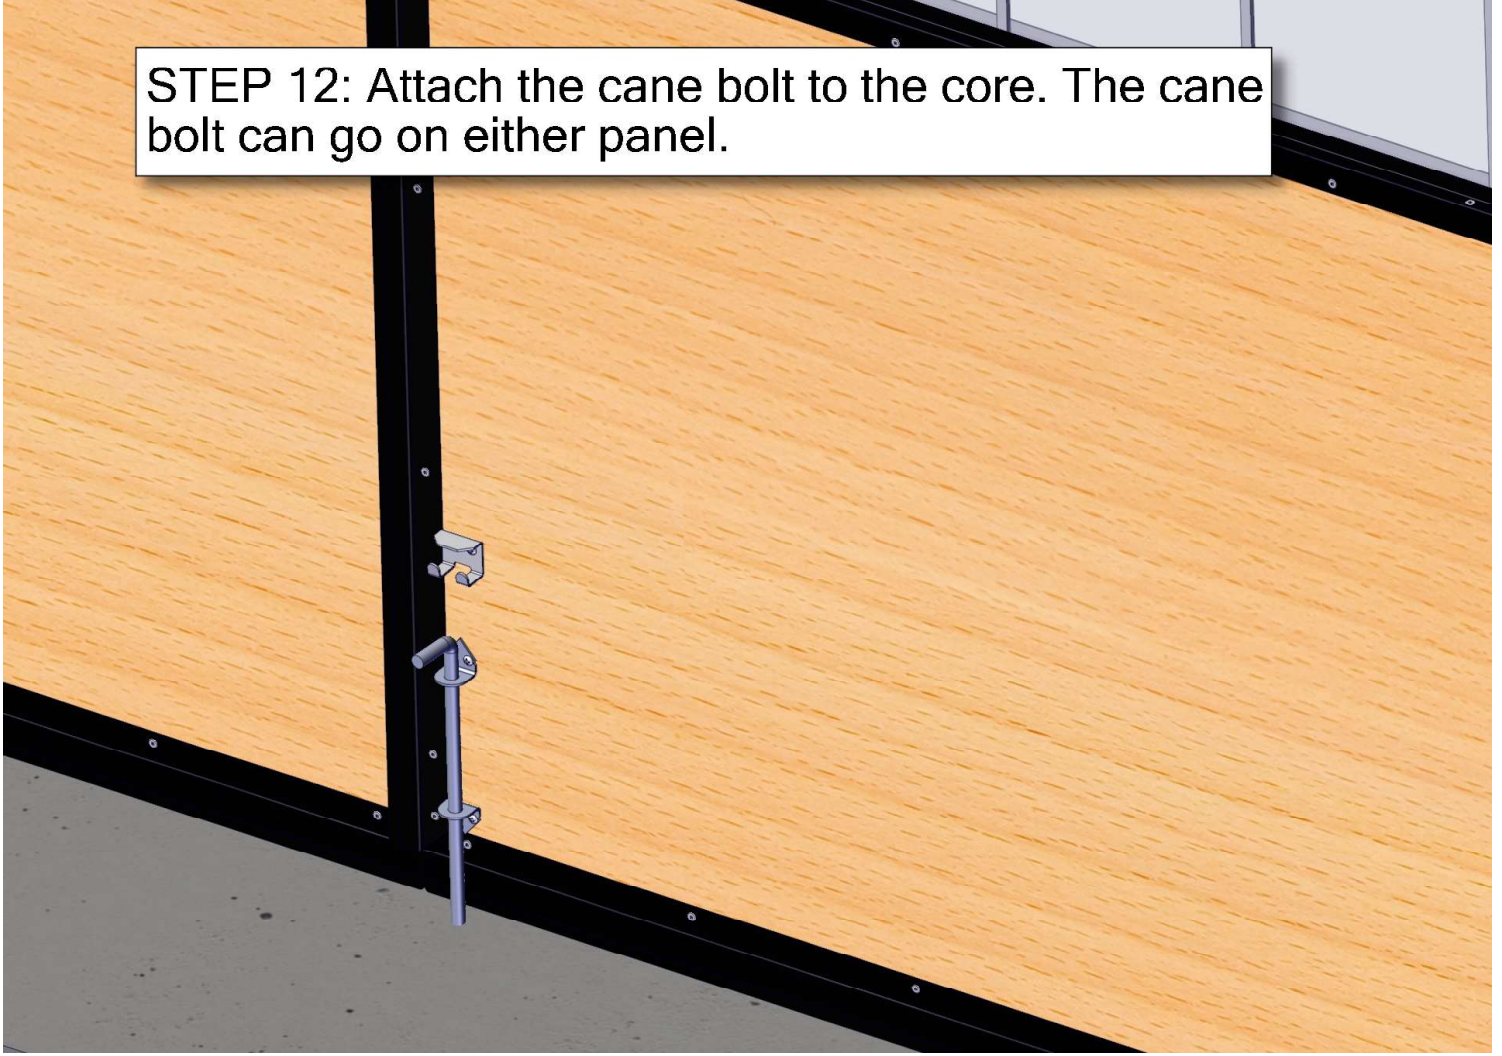


**STEP 13: Jamb Latch**

\*For doors with glass.

Close and center doors. Attach the jamb latch to the jamb (as shown) with the provided hardware (red bag). A multi-position slot is provided in the door for the latch to catch. Adjust rod is needed.

It is recommended that the top of the jamb latch is level with the latch location on the door.

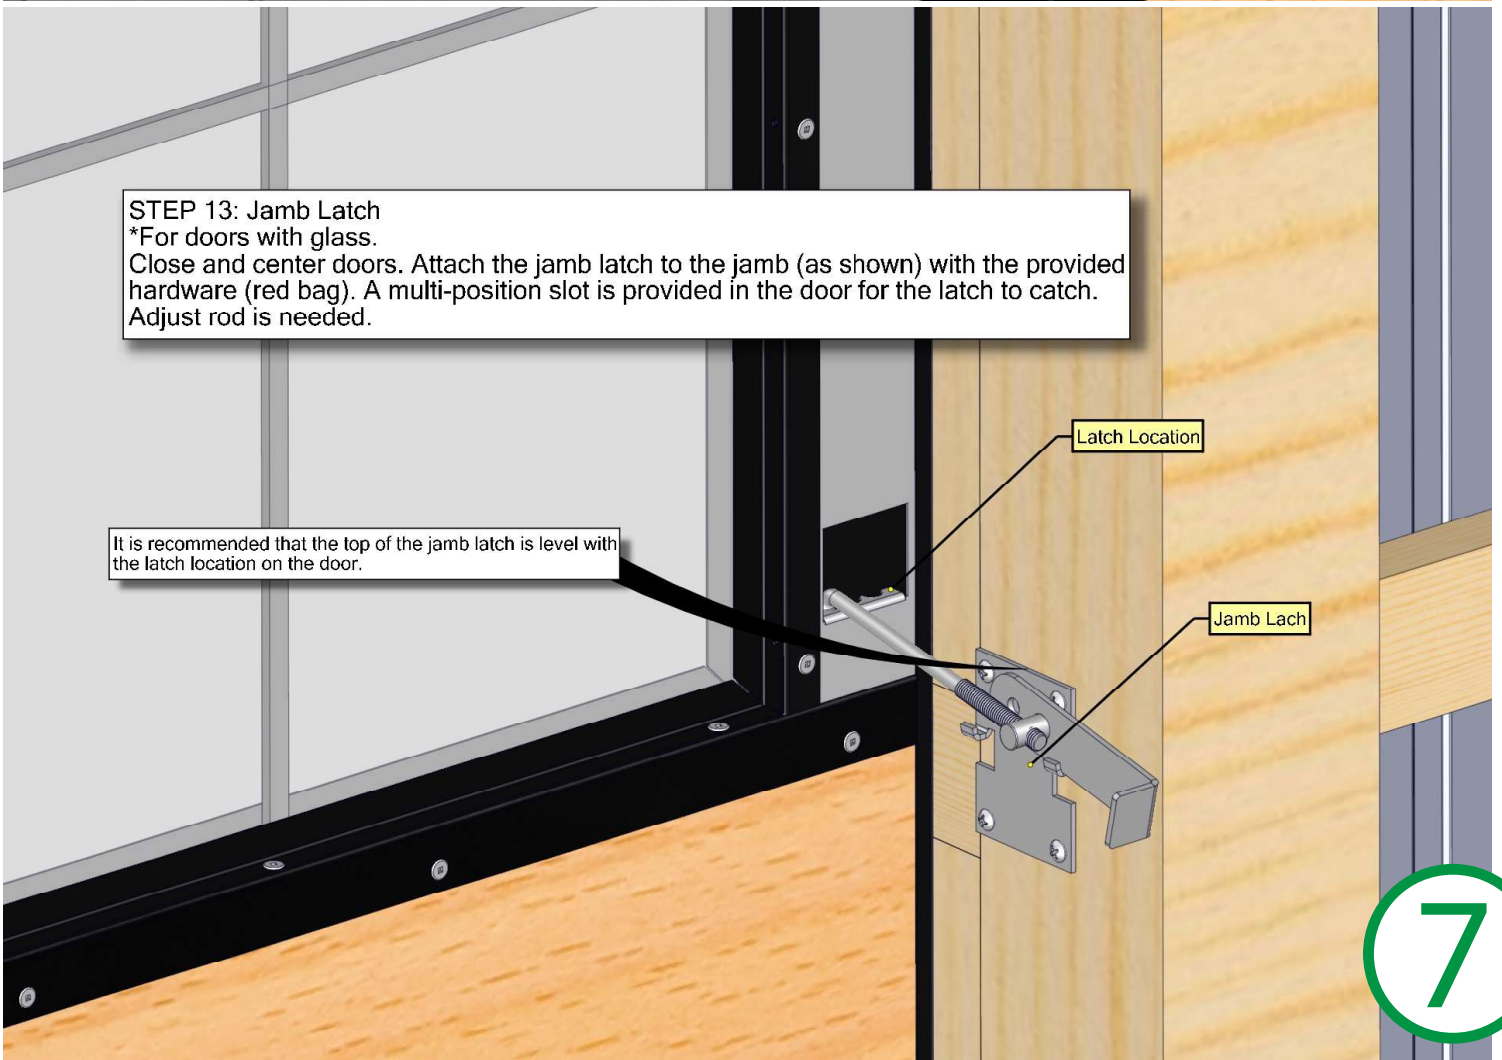




Step 14

\*For doors without glass.

Close and center doors. Place jamb latch plate at desired height. Mark the opening of the jamb latch plate on to the core of the slider. Drill this area out no more than the thickness of the plywood.

The top of the Jamb latch should be flush with the latch location. (Refer to Step 12).

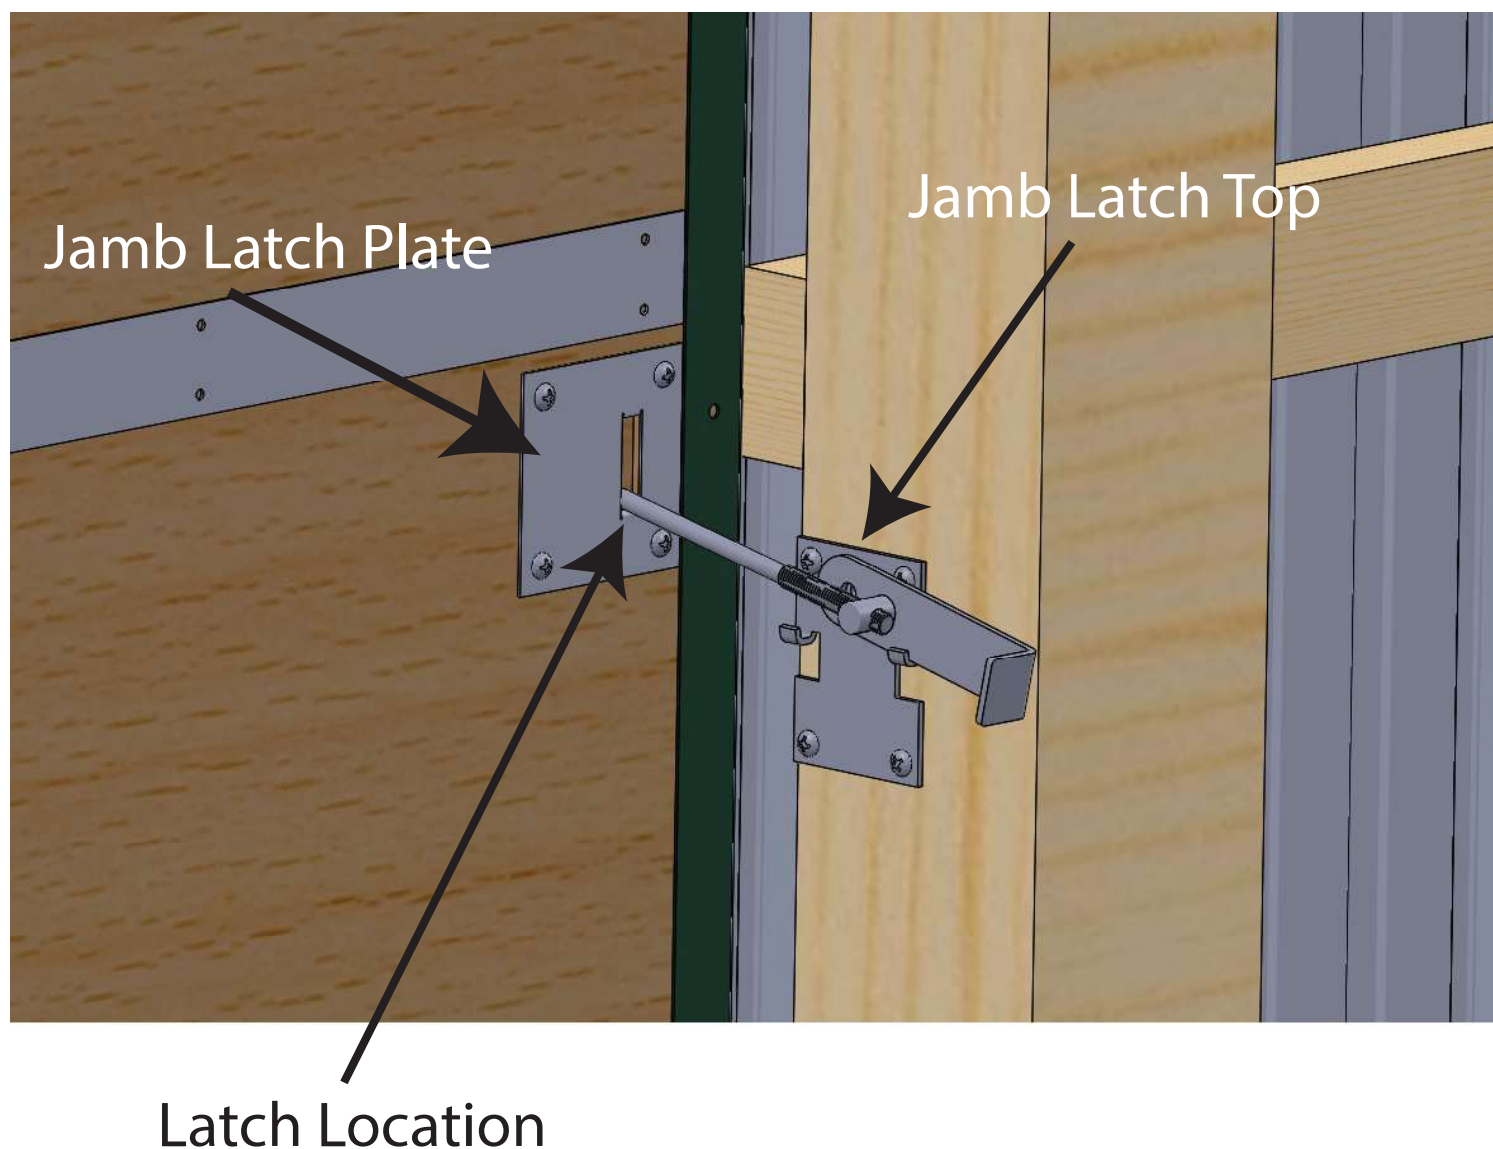

---

**YOUR PREMIER SLIDER IS NOW COMPLETE. IF YOU HAVE ANY QUESTIONS OR COMMENTS, PLEASE DON'T HESITATE TO CONTACT US. WE ARE HERE TO HELP!**

Phone-434.933.8939    Email- [Sales@stallworksllc.com](mailto:Sales@stallworksllc.com)  
[www.stallworksllc.com](http://www.stallworksllc.com)