

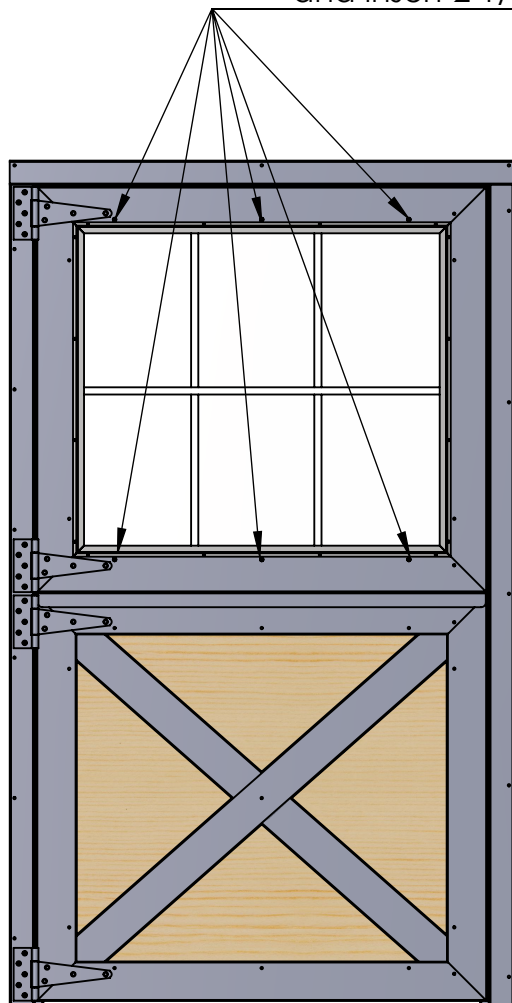


Step 1: Remove these 6 bolts from door. Leave T-Nuts in back of door and insert 2 1/2" bolts from kit.

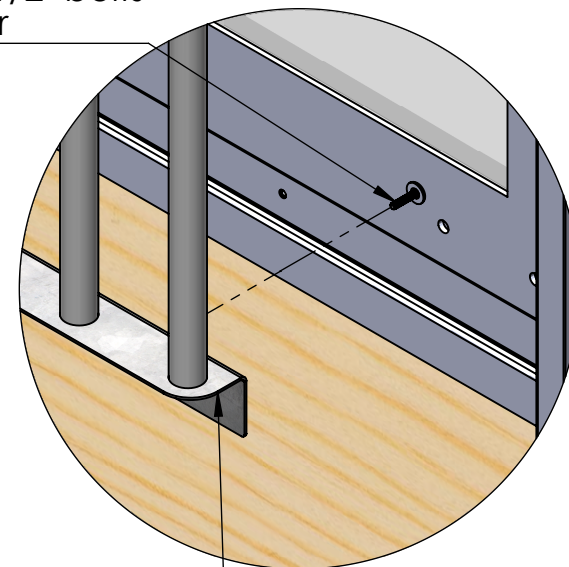

Step 2: Slide grill over 2 1/2" bolts on back of door

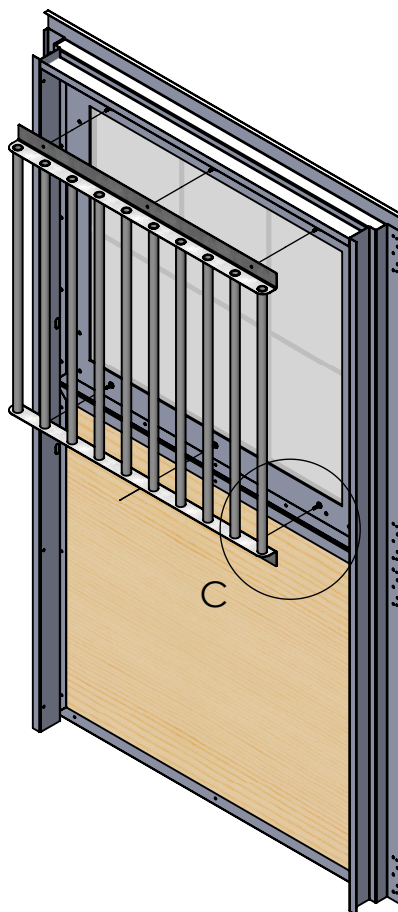

DETAIL C
SCALE 1 : 5

Step 3: Fasten grill with 12-24 lock nuts in kit

Step 4: Finished

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF STALLWORKS. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF STALLWORKS IS PROHIBITED.

STALLWORKS, LLC
9056 Oakville Road
Gladstone, VA 24553
434-933-8939
www.stallworkslc.com

2520 Dutch Door/Bale Door Window Grill Installation Instructions