



STALLWORKS

EQUINE STALL & DOOR SYSTEMS

2800 INSTALLATION INSTRUCTIONS

*BEFORE YOU BEGIN. Please be aware that every barn and every situation is unique. Some mild alterations might be required from the instructions in order to make it go smoothly for your barn.

For questions and comments please don't
hesitate to contact us!


Customer Service

434.933.8939


Sales@stallworksllc.com

9056 Oakville Rd, Gladstone VA 24553



STEP 1: INSTALL T&G
TO TOP OF GRILL R.O.

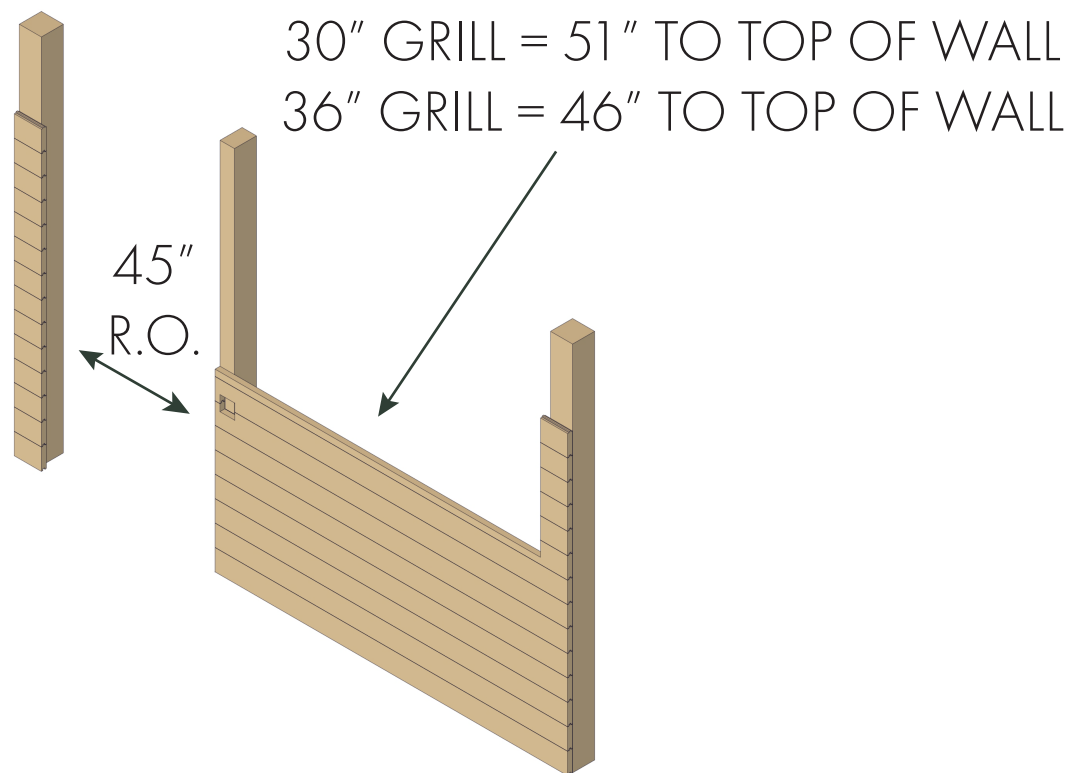

STEP 2: INSTALL GRILL. MAY NEED TO CUT GRILL
TO FIT. FINISH RUNNING T&G AFTER GRILL IS IN PLACE

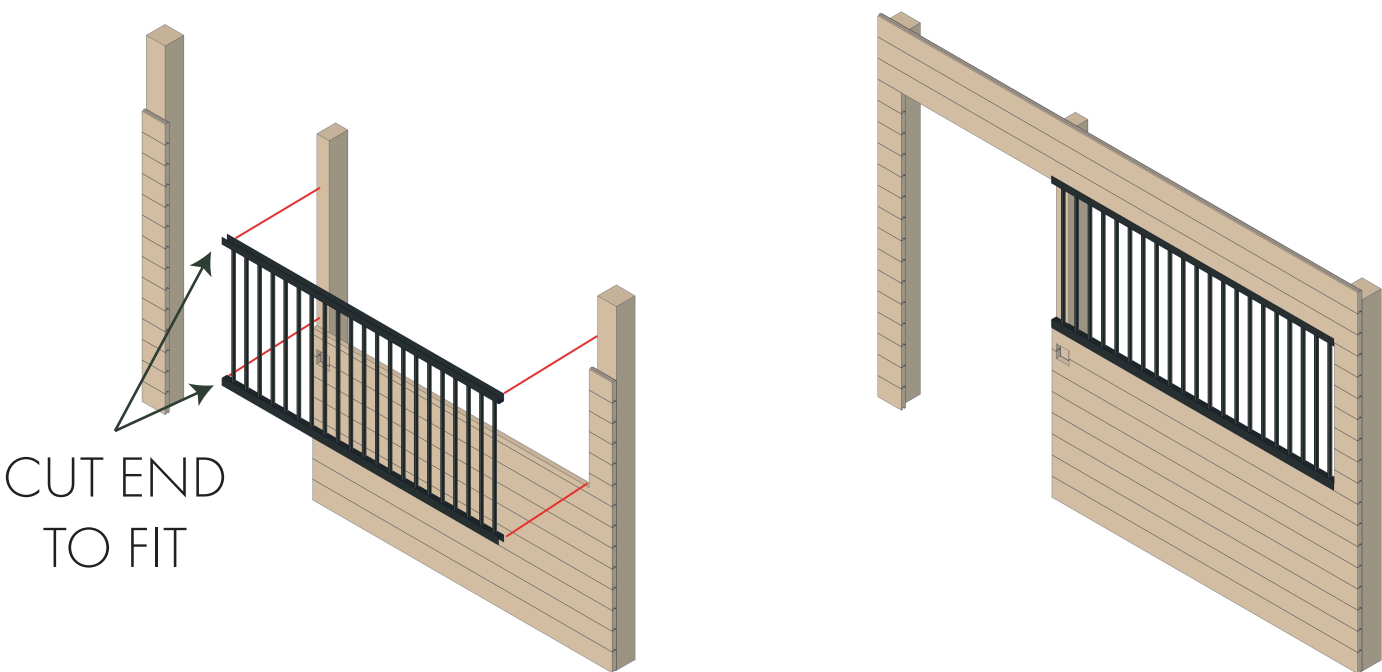


STEP 3: TRACK BRACKETS AND TRACK ARE SCREWED
IN PLACE. FROM FLOOR TO TOP OF TRACK BRACKET IS 94"

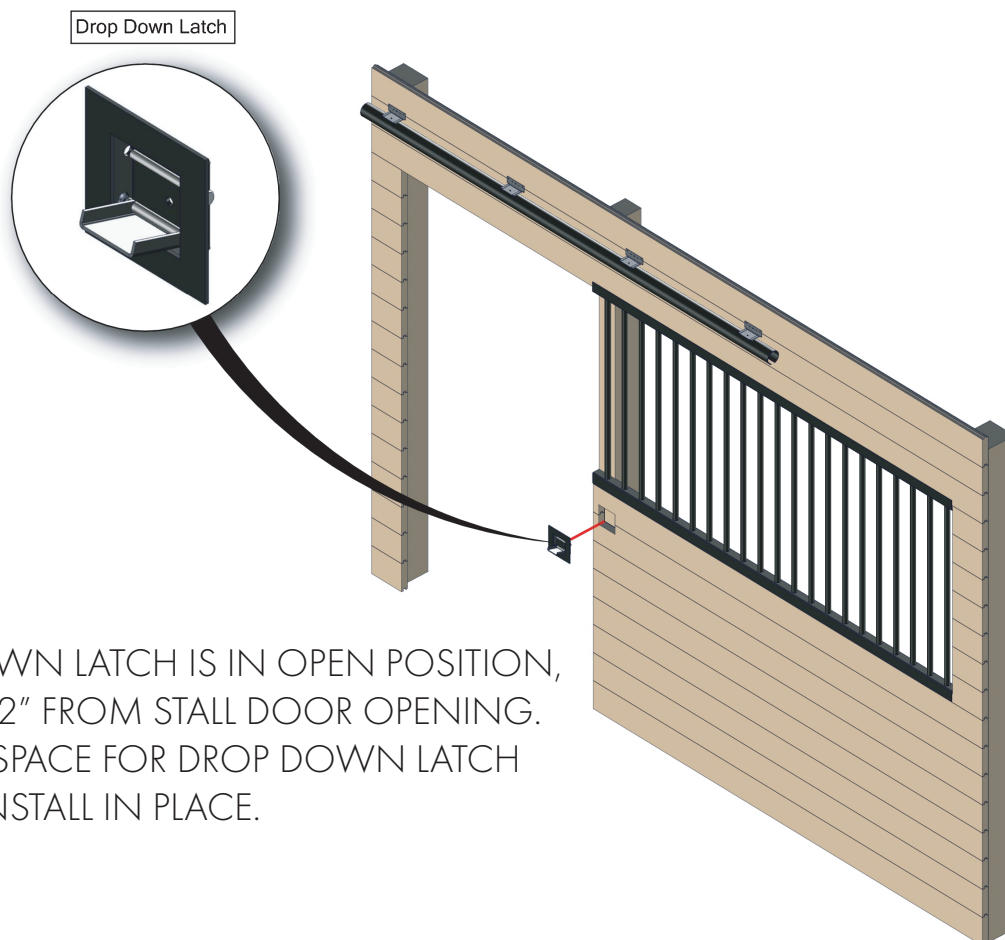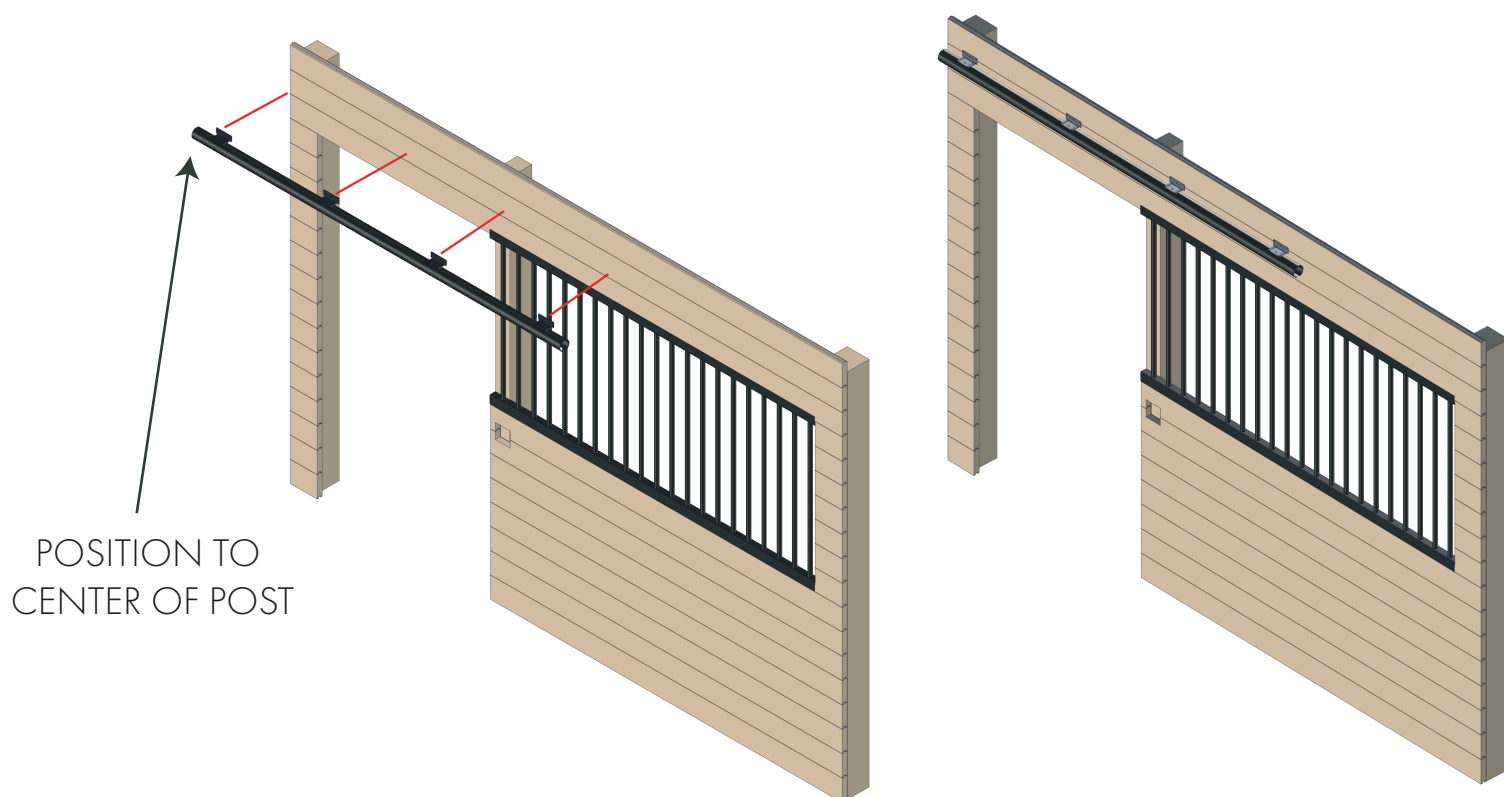

STEP 4: WHEN DROP DOWN LATCH IS IN OPEN POSITION,
THE LATCH SHOULD BE 2" FROM STALL DOOR OPENING.
MARK AND CUT OUT SPACE FOR DROP DOWN LATCH
AND INSTALL IN PLACE.

STEP 5: STALL DOOR SHOULD HANG $1/2''$ - $3/4''$ FROM FLOOR. ADJUST STALL DOOR USING THE BOLTS ON TOP. WHEN SHUT THE STALL DOOR SHOULD OVERLAP OPENING $2''$. FASTENERS ON STALL DOOR SHOULD BE FACING OUT.

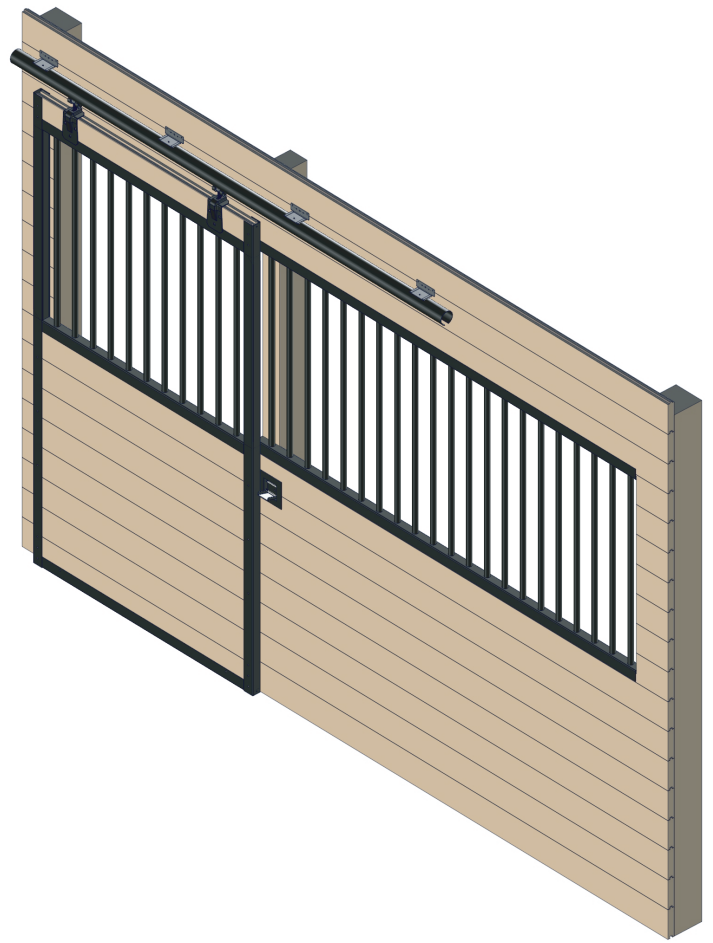

STEP 6: FINDING THE LOCATION OF DOOR KEEPERS. SHUT DOOR AND INSTALL LEFT AND BOTTOM DOOR KEEPER. OPEN STALL DOOR SO THE DOOR IS HANGING $1/2''$ IN STALL OPENING. THEN INSTALL RIGHT DOOR KEEPER.

